

User Manual

Thank you for purchasing the Moby S. Please read this User Manual before using the product, and store it in an appropriate place for easy reference at any time.

For additional copies of this User Manual please contact your dealer or local Steelcase office. If you transfer the product to a new owner/user, be sure to transfer this User Manual with it.

Safety Warning

Do not use this product near a heater or an open flame. Never touch the moving parts or gaps in the product. Do not disassemble or remodel parts of the product, as such attempts may result in injuries. If you notice a loose screw (which may produce a rattling noise) contact your dealer or Steelcase Sales Department. Use of products in this condition may result in injuries.

Care and Maintenance

To maintain the product's appearance, wipe it with a clean dry soft cloth. To remove dirt or stains, wipe it with a clean soft cloth that is slightly dampened with a diluted detergent solution. To ensure smooth running, caster pintles should be lubricated once or twice a year.

Do not use the product in direct sunlight or outdoors, as it may result in discoloring and/or deformation of the materials. Do not use the product in places where it may be exposed to water splashing on the product or very high temperatures. Such use may result in rusting, discoloring and/or deformation of the materials.

Troubleshooting

If you have problems with using the Moby S, first please check the simple fixes below. If you continue to have problems or suspect a problem with the product, contact your dealer or Steelcase Sales Department.

Castors don't run smoothly:

Lint may be covering the casters. Please clean the caster(s).

Tambour door doesn't open/close smoothly:

Dust or dirt may have accumulated on the door rail. Please clean the rail.

The door cannot be locked with the key:

Please check that the door is closed correctly to the specified position.

The key does not work correctly:

The cylinders of the lock may have been worn away. Please grease the cylinders with a grease spray gun.

Materials components

Structure	:	Particle board and low pressure laminate
Waterline	:	Aluminum
Handle	:	Aluminum
Shelf	:	Steel
Wheel caster	:	Plastic
Corner bracket	:	Plastic

End-of-Life Disposal

Do not disassemble this product before disposing of it. Please send it to an industrial waste disposer for appropriate disposal.

Warranty

The warranty for this product remains valid for the period shown below, calculated from the date of manufacture on condition that it is used in normal service conditions:

8 years: Structure

5 years: Doors, door frames and mechanism

This warranty applies to customers who bought the product from authorized Steelcase dealers. Even during the warranty period indicated above, this warranty may become void if the product is exposed to the following:

1. Suffers a natural or human-created disaster
2. Has been altered or remodeled by the customer/user
3. Has not used in accordance with the instructions given in this User Manual.

Note:
Steelcase reserves the right to change product features and specifications to improve the product without notice at any time. Please read the User Manual which corresponds exactly to your product.